


DMX interruption with Mac Energy saving settings and Screen Saver

Defaults Mac energy saver settings doesn't prevent computer from sleeping automatically when display is off.



When the display switch off, few minutes later the dmx signal stop to play (come back automatically when the display is on).

To prevent this issue you have to activate the option :

1 : Go to « System Preferences » and « Energy Saver »

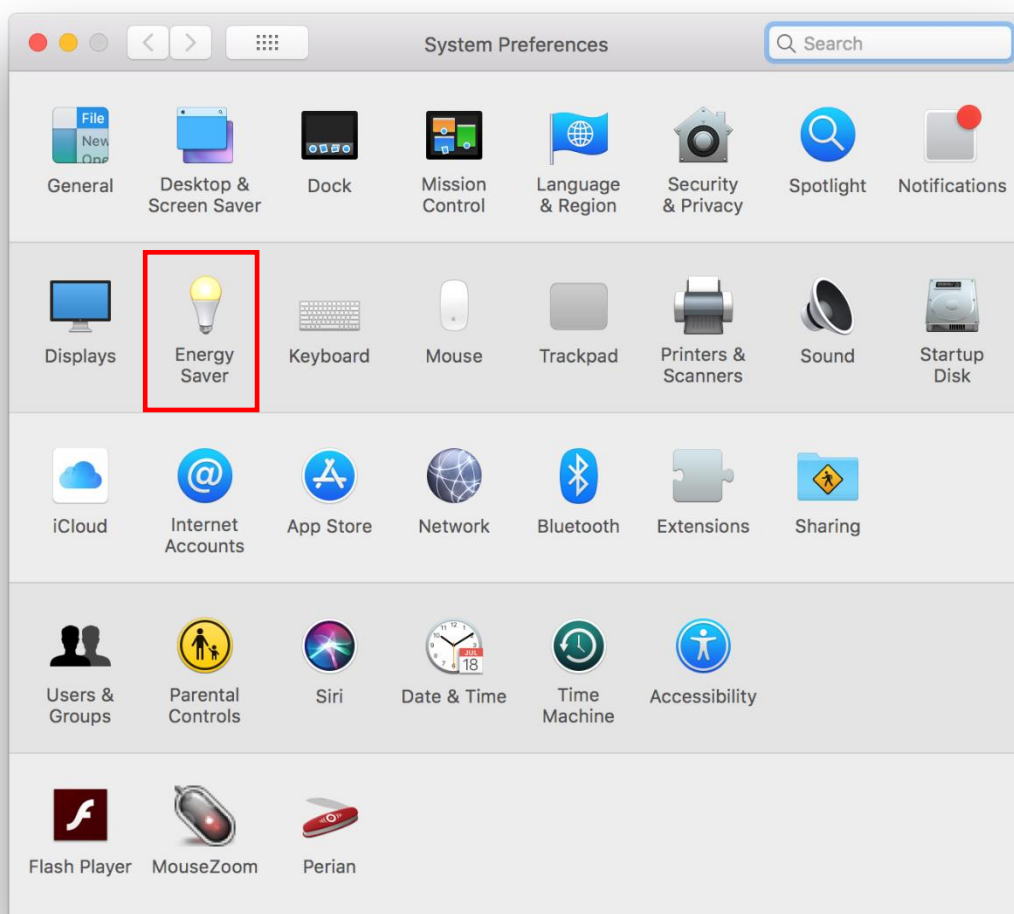


2 : Select « Prevent computer from sleeping automatically when the display is off »

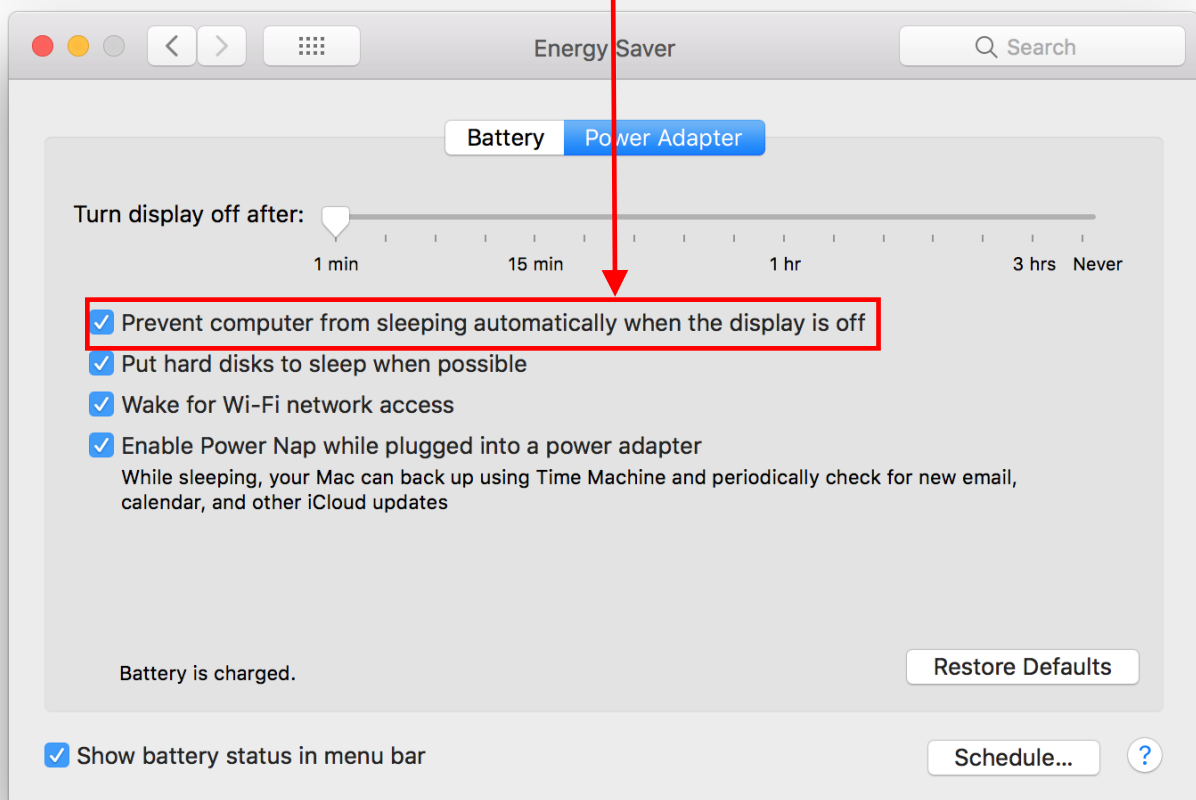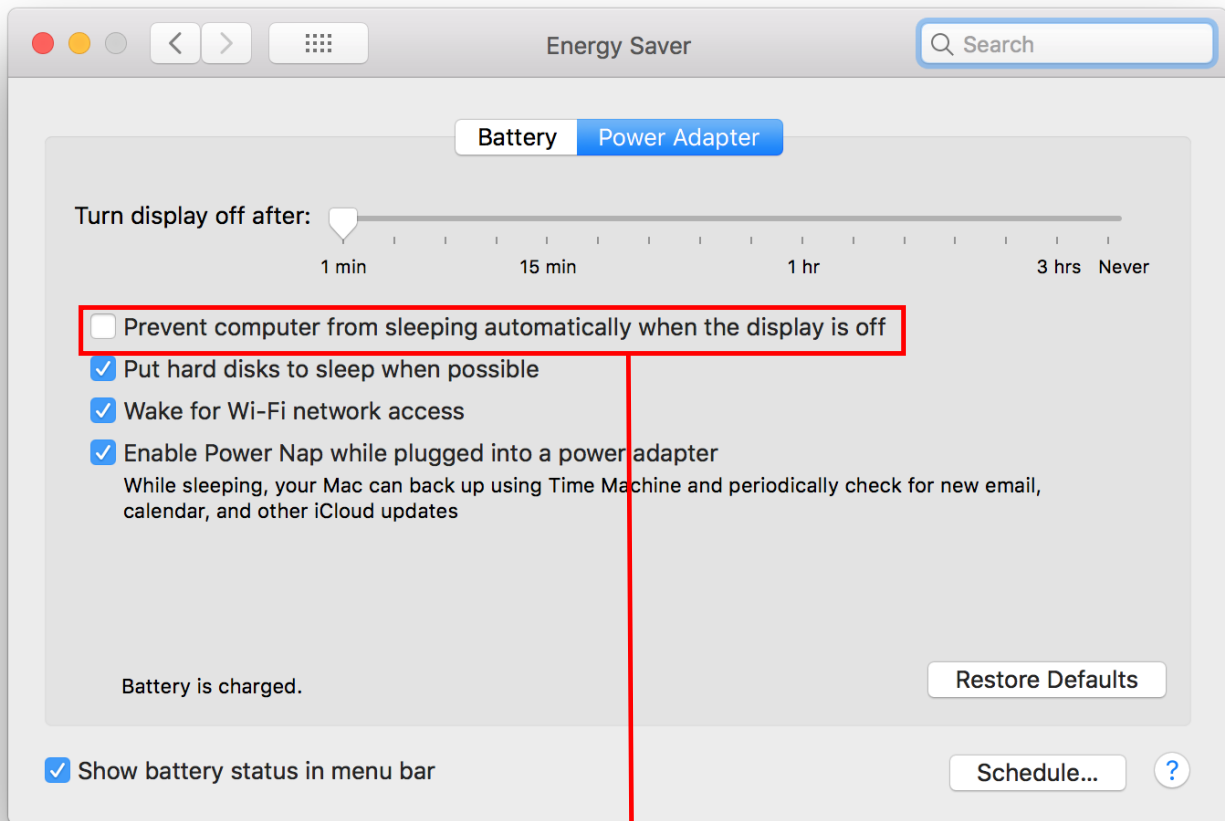

Screen saver can also stop the DMX Signal, you have to unactivate it :

1 : Go to « System Preferences » and « Desktop and Screen Saver »

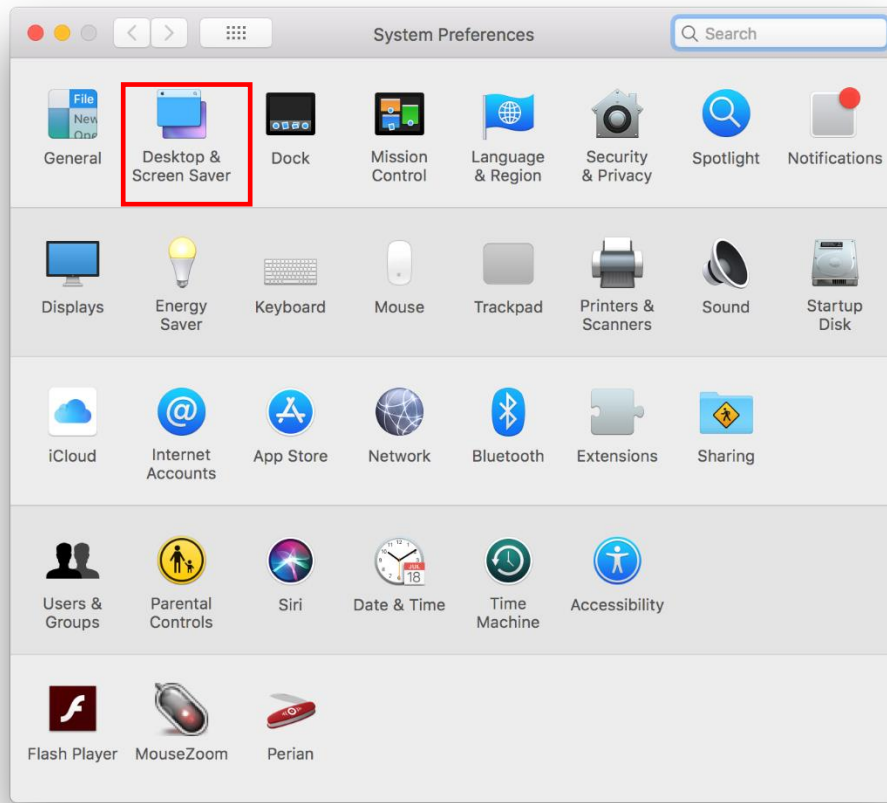

2 : Select « Never » at « Start after » :

